


Remove old Rip Rap in Highlighted area.
Place Old rip rap on failing north shoreline
Install New Boulder Rip Rap in this section.
Boulder rip rap like shown in Picture #2 prevents ice from
Altering
shoreline like it has done on this property in the past.

Photo #2

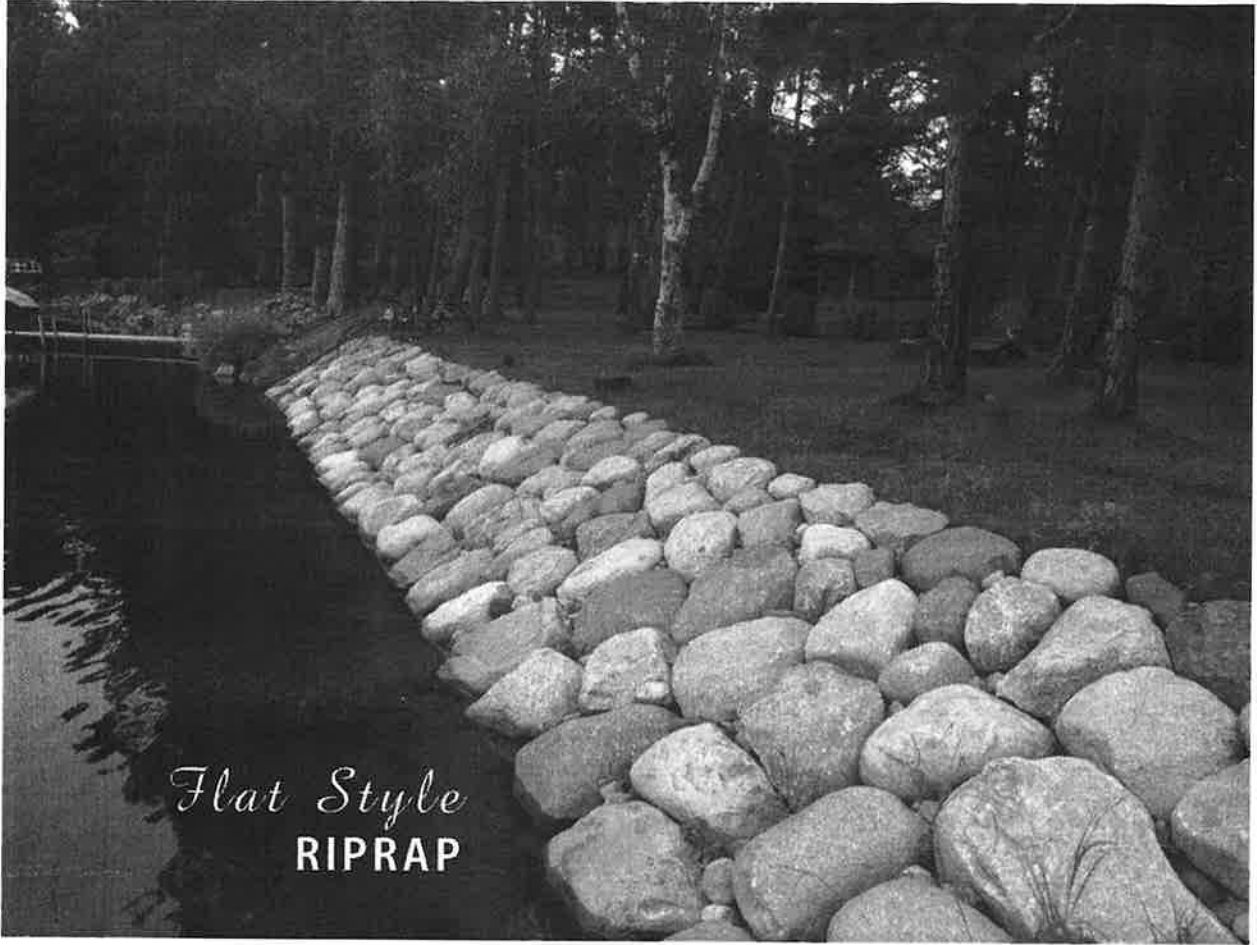

Flat Style
RIPRAP